




Master BLP33M

schemat

www.master.sklep.pl

kontakt: www.master.sklep.pl/kontakt

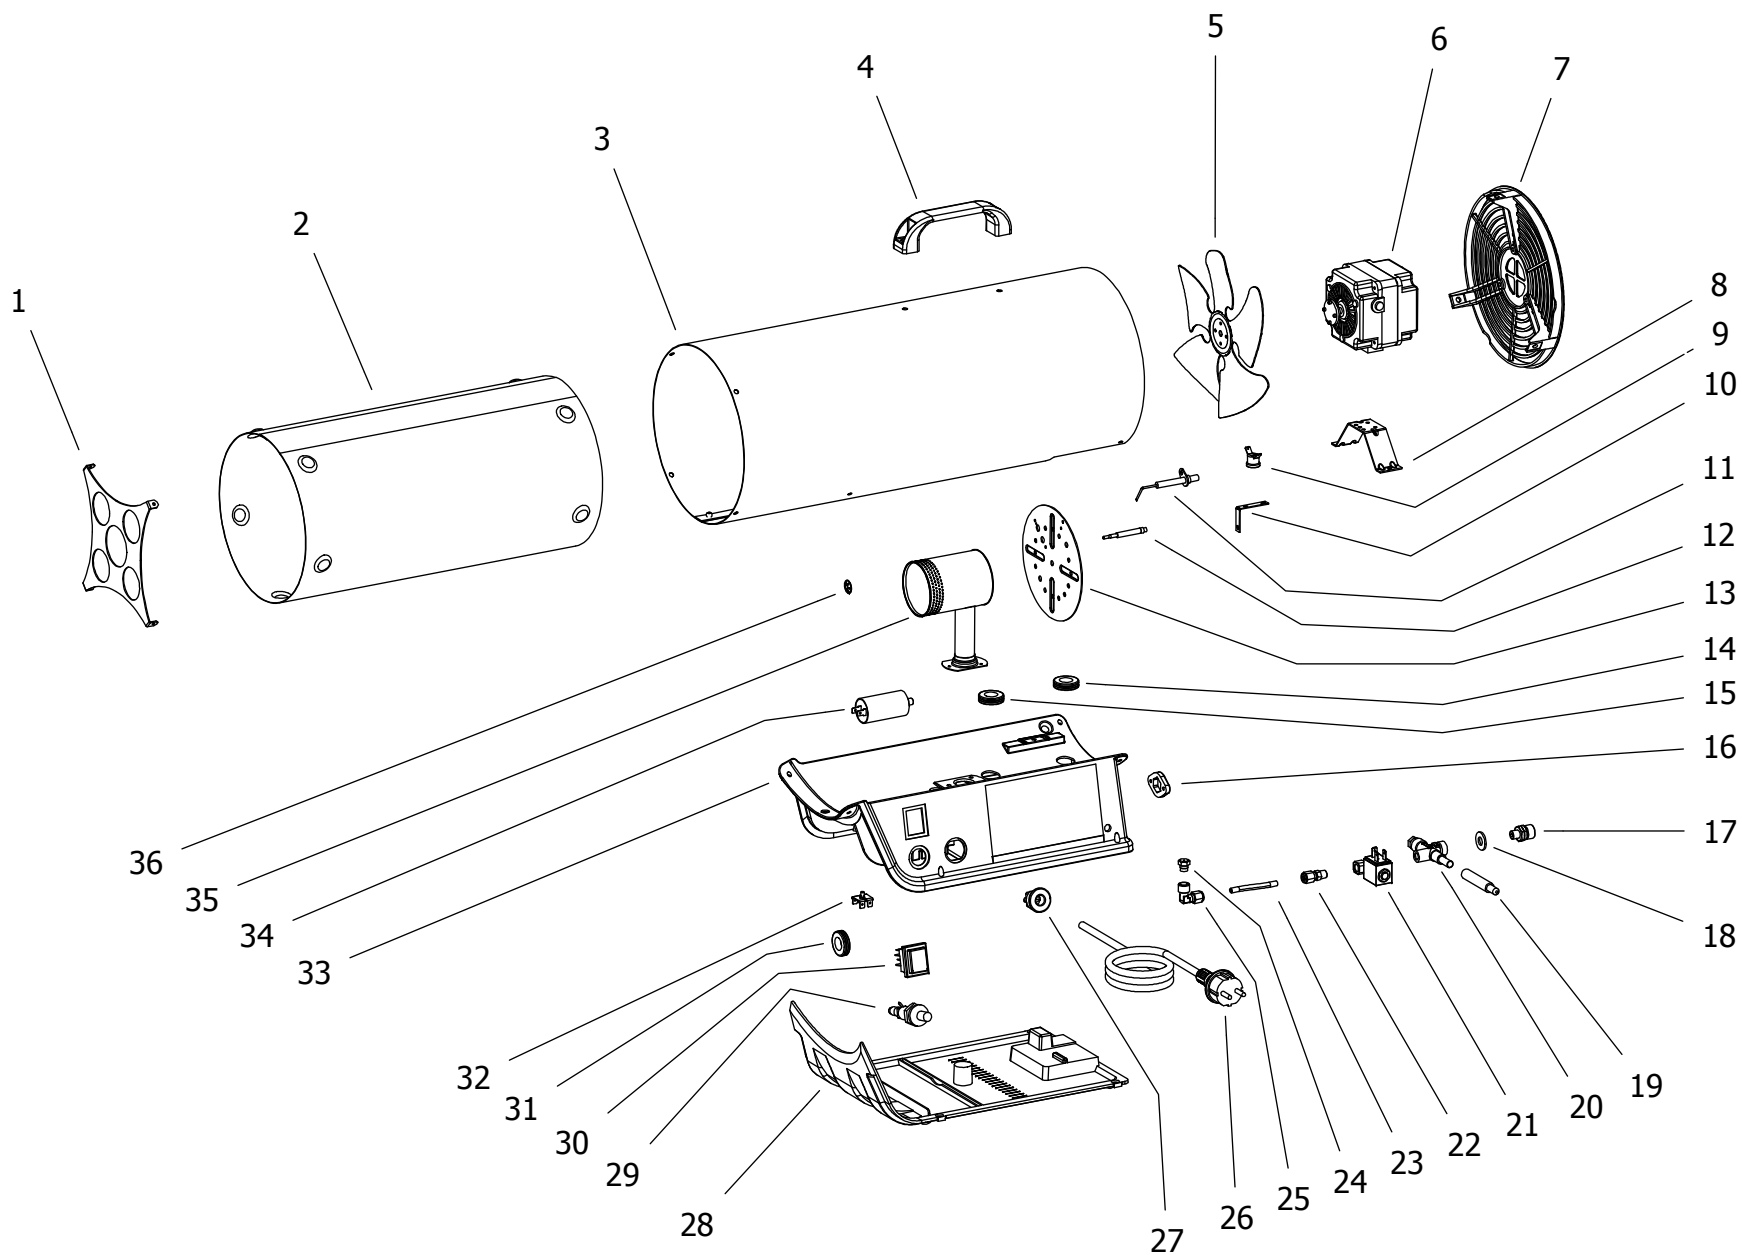

Pos.	Code NR	Description
1	4160.764	OUTLET GRID
2	4161.373	COMBUSTION CHAMBER
3	S/R	COVER
4	4162.893	PLASTIC HANDLE
5	4161.175	FAN BLADE
6	4160.045	MOTOR
7	4161.863	PLASTIC INLET GRID
8	4161.177	MOTOR BRACKET
9	4160.636	SAFETY THERMOSTAT
10	4160.708	SUPPORT FOR THERMOSTAT
11	4160.731	IGNITION ELECTRICAL FOLDER
12	4160.654	INERRUPTED THERMOCOUPLE
13	4160.726	BURNER PLATE
14	4160.646	GROMMET
15	4160.646	GROMMET
16	4161.854	BLOCK FOR NOZZLE
17	4160.048	GAS INLET NOZZLE
18	4160.283	WASHER
19	4162.885	VALVE ROD
20	4161.137	SAFETY VALVE
21	4160.562	ELECTROVALVE
22	4160.623	NIPPLES REDUCER
23	4162.886	COPPER TUBE
24	4162.887	GAS NOZZLE
25	4160.621	ELBOW
26	4160.539	POWER CORD
27	4160.635	KEEPER WIRE
28	4162.883	LOWER PLASTIC BASE
29	4162.222	PIEZO IGNITOR
30	4160.637	SWITCH
31	4160.646	GROMMET
32	4160.639	RIVET POP
33	4162.882	UPPER PLASTIC BASE
34	4161.830	CAPACITOR 20F
35	4162.889	GAS BURNER
36	4160.627	ELASTIC WASHER

S/R = Parts available on special request only



www.master.sklep.pl
kontakt: www.master.sklep.pl/kontakt