



Master DC61

schemat

www.master.sklep.pl

kontakt: www.master.sklep.pl/kontakt


MODEL DC61 - 12 V (SCHUKO - NEW ZEAL.)

UNIT 1

ILLUSTRATED PARTS BREAKDOWN

From serial number:


Rev.- - Sep. 2017

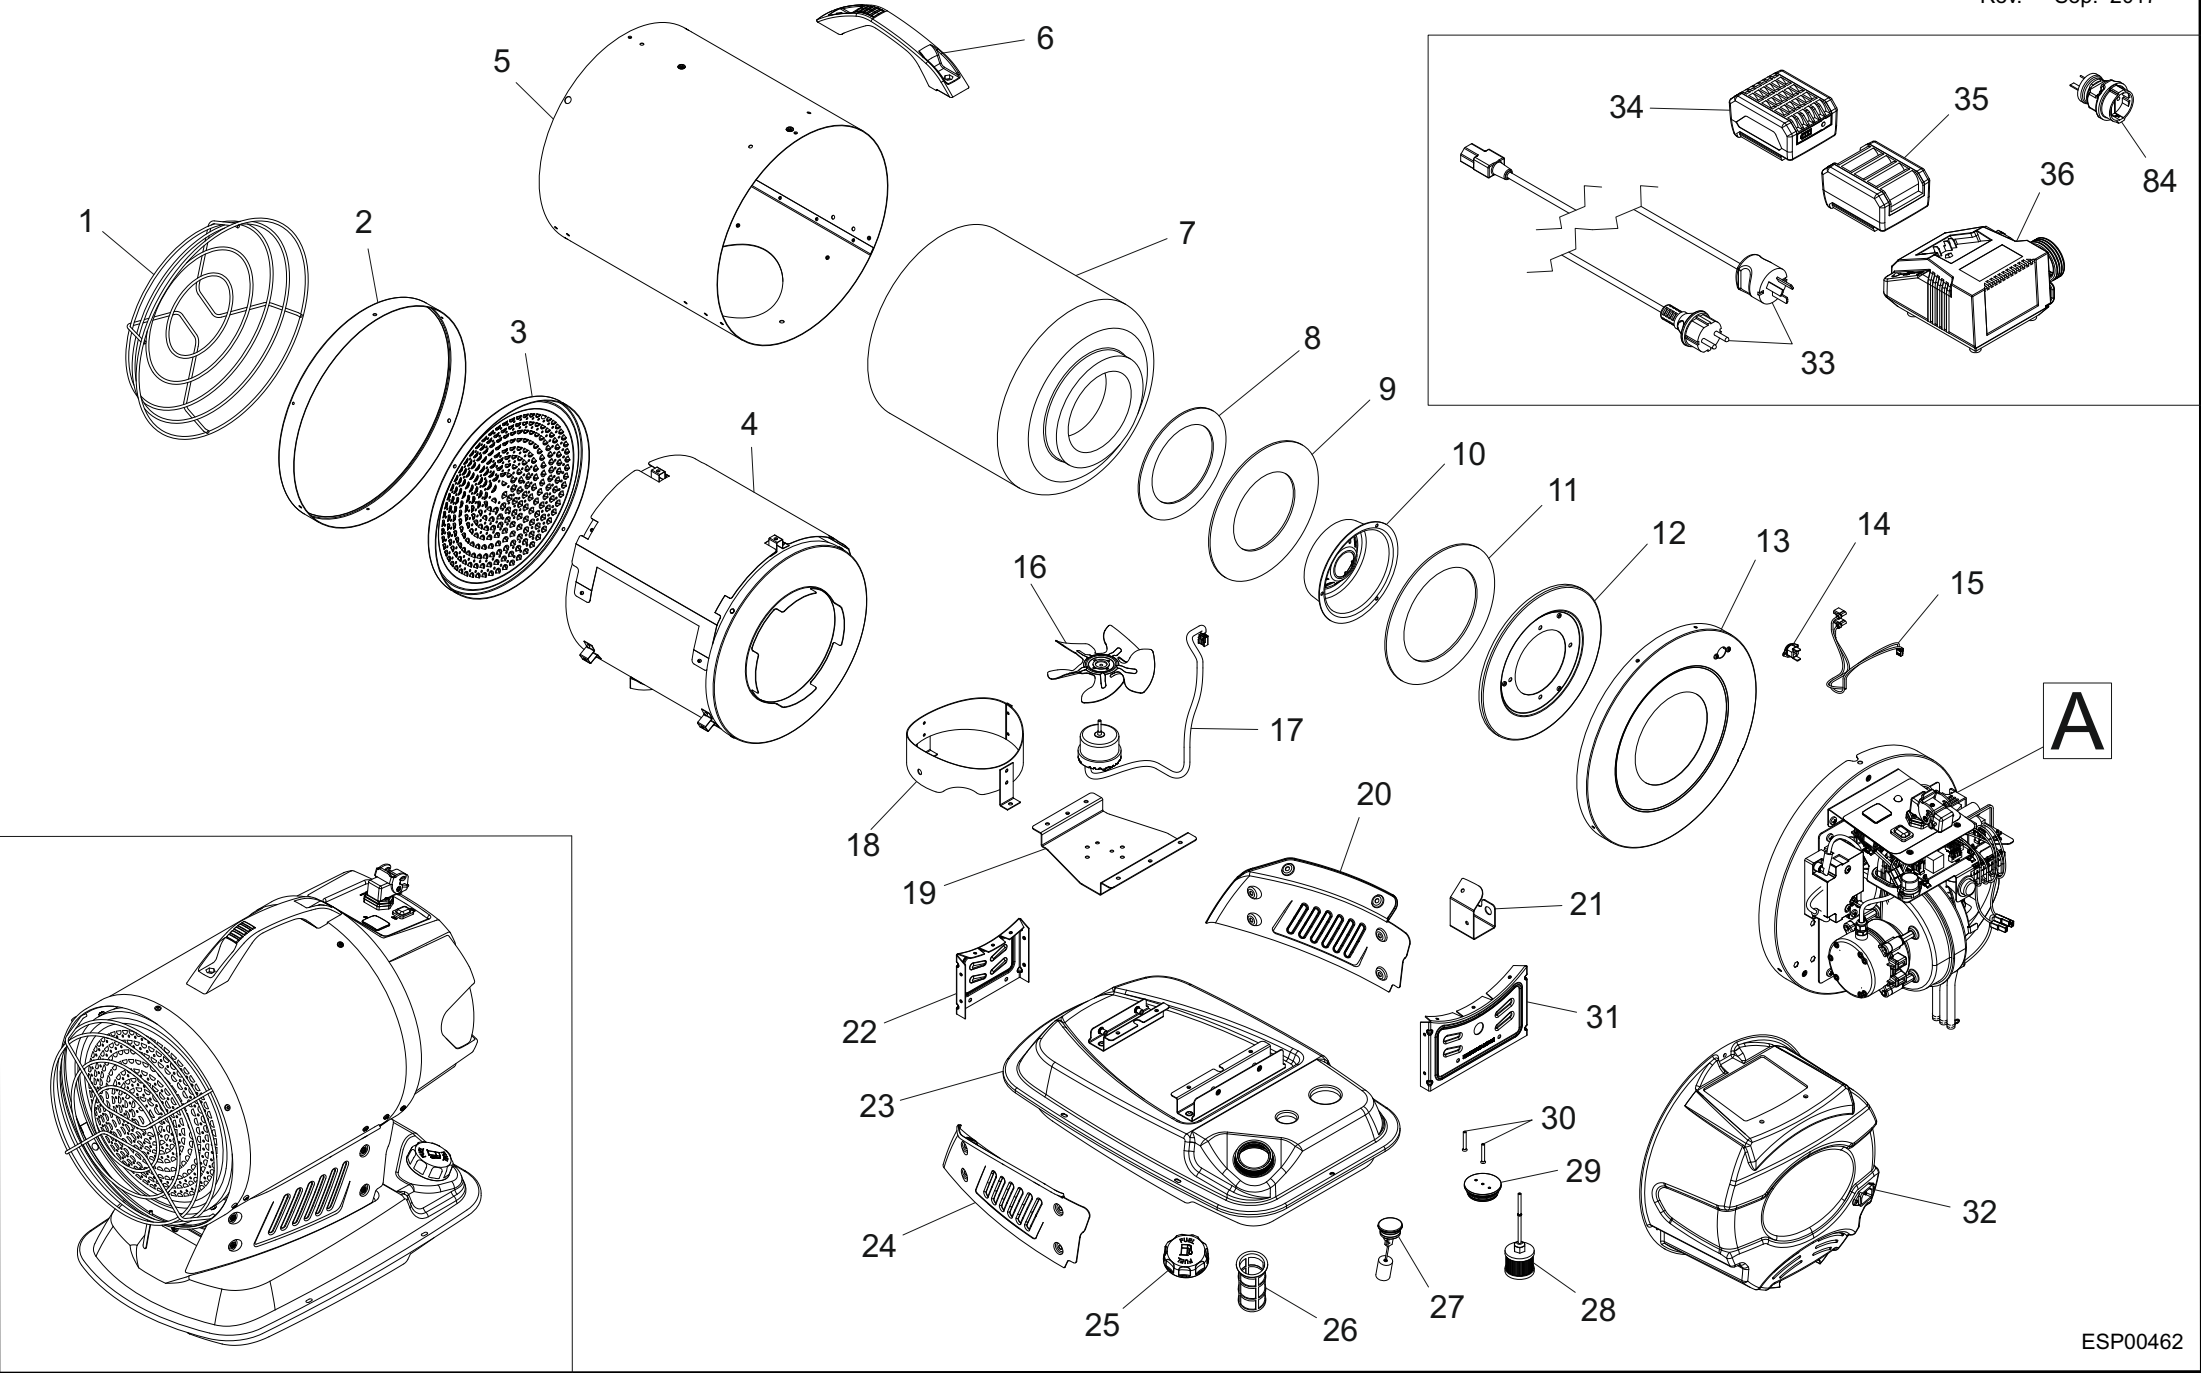

MODEL DC61 - 12 V (SCHUKO - NEW ZEAL.)

UNIT 2

ILLUSTRATED PARTS BREAKDOWN

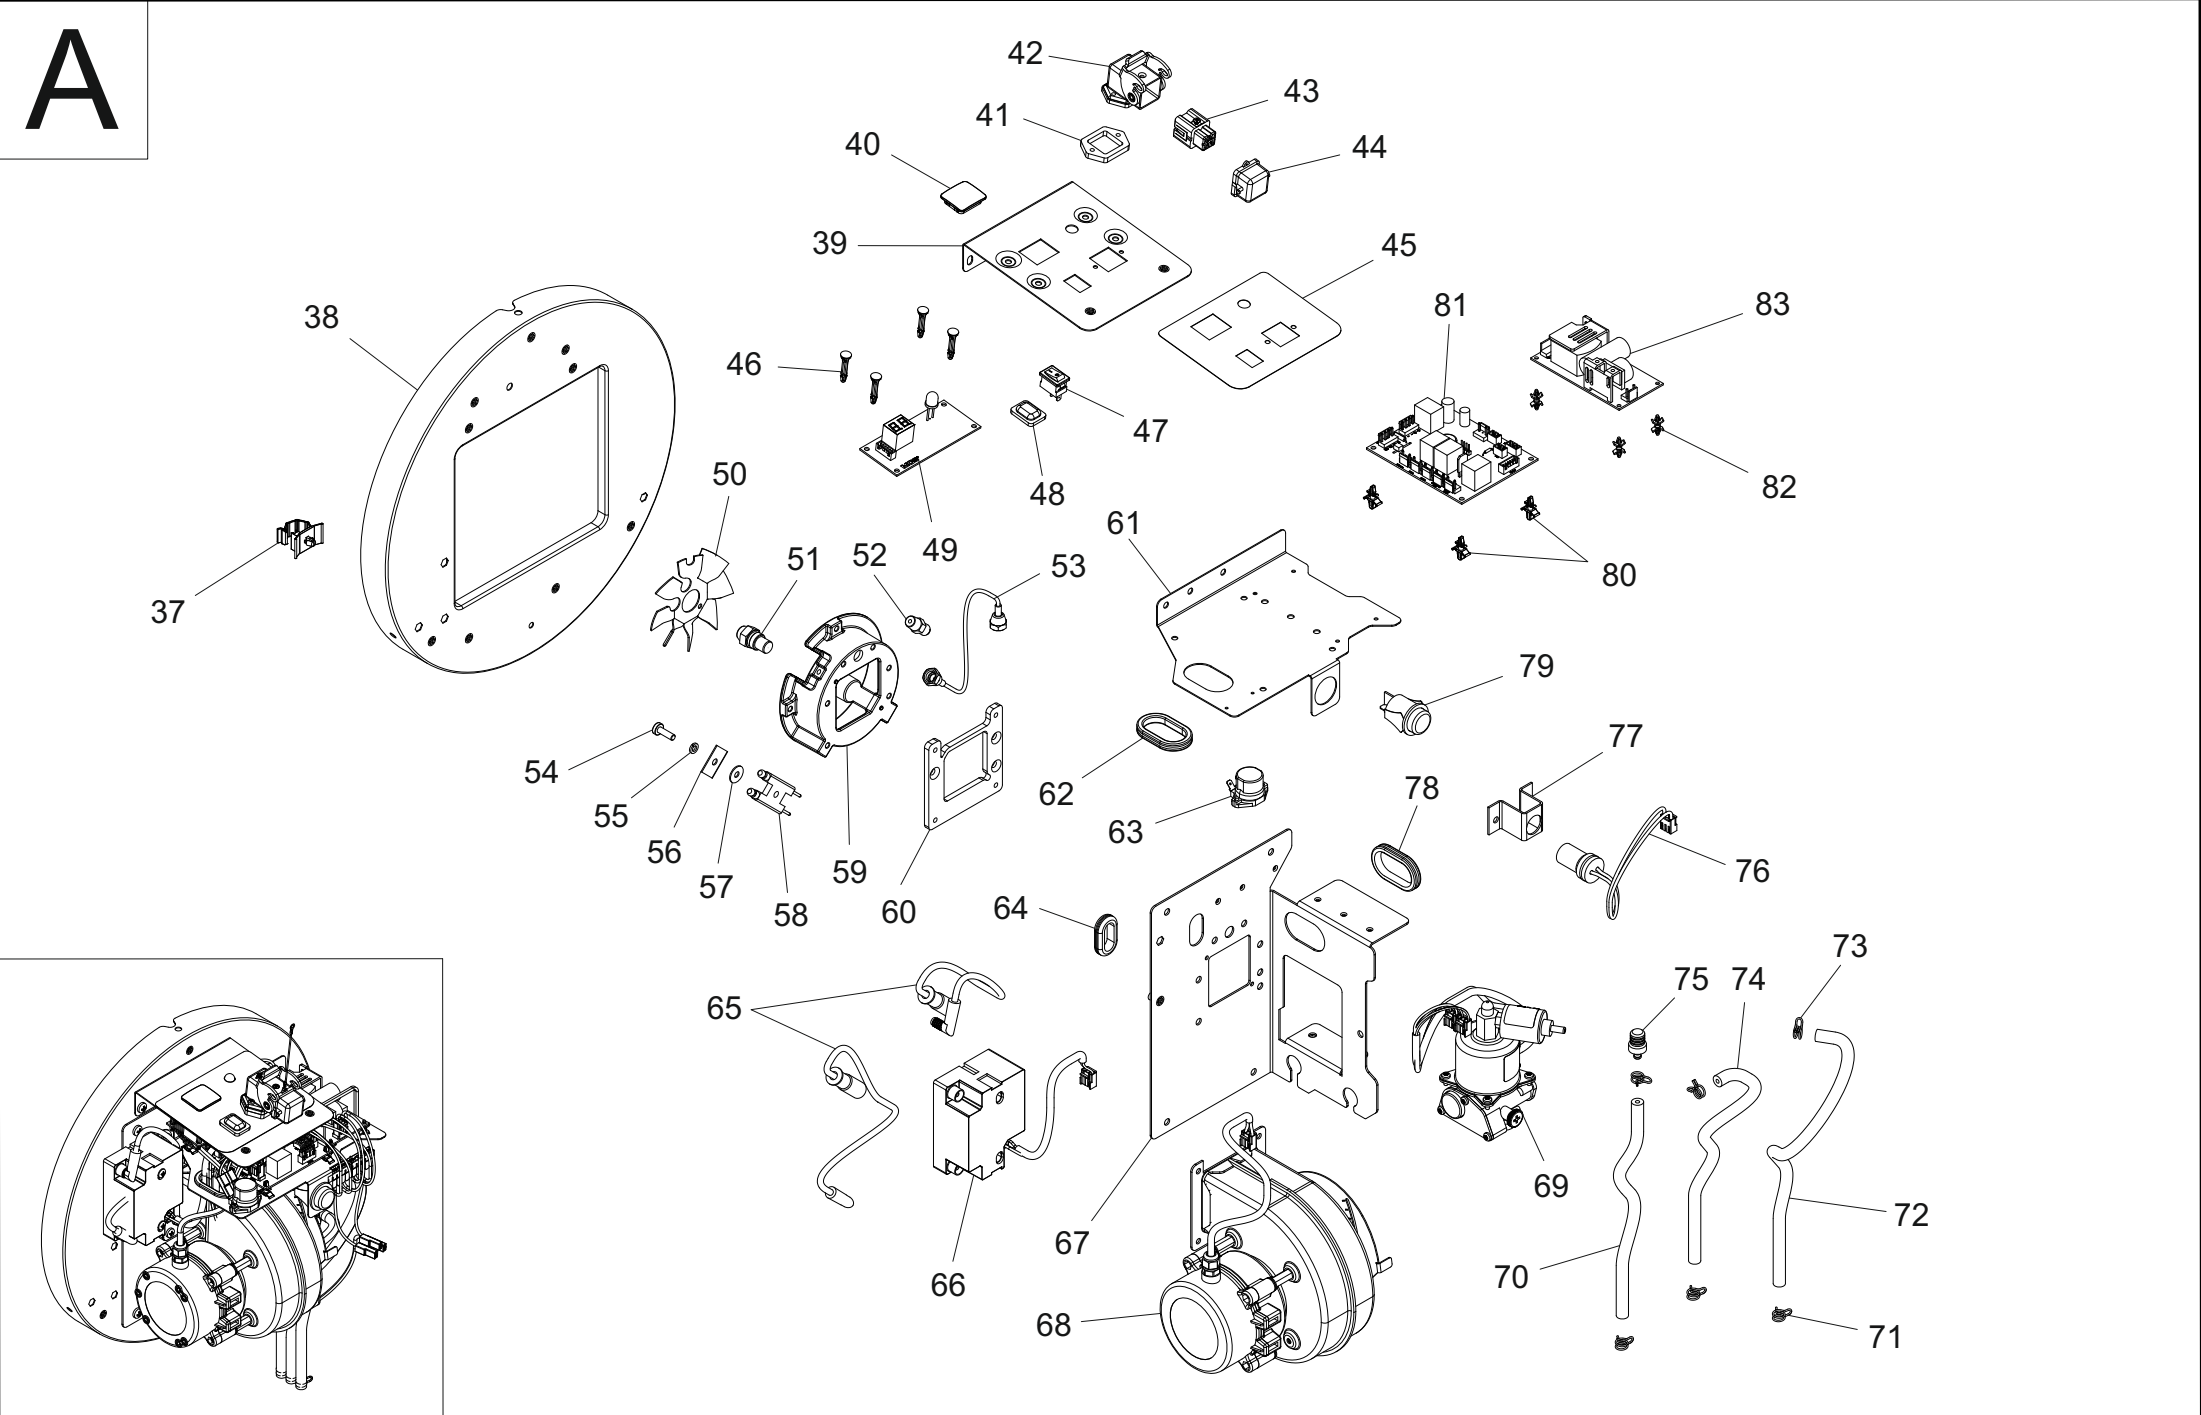

MODEL DC 61 - 12 V (SCHUKO - NEW ZEAL.)

UNIT 2

PARTS LIST

POS.	Code NR	Description	Rev. - - Sept. 2017
1	4201.046	ANTERIOR GRILL	
2	4201.074	GRILL RING	
3	4201.045	RADIANT DISK	
4	4201.371	COMBUSTION CHAMBER	
5	4201.412	EXTERNAL SHELL	
6	4201.048	HANDLE	
7	4201.044	INSULATION CHAMBER	
8	4201.475	SIDE DIFFUSER CERAMIC FIBER GASKET	
9	4201.139	CERAMIC FIBER GASKET	
10	4201.030	DIFFUSER	
11	4201.032	CERAMIC FIBER GASKET	
12	4201.031	MOLDED FLANGE	
13	4201.421	REAR PLATE	
14	4260.269	SAFETY THERMOSTAT	
15	4201.290	SAFETY THERMOSTAT WIRES	
16	4201.396	COOLING FAN	
17	4260.245	COOLING MOTOR	
18	4201.018	COOLING MOTOR RING	
19	4201.372	COOLING MOTOR BRACKET	
20	4201.011	LEFT SIDE SHELL	
21	4201.370	POWER CORD BRACKET	
22	4201.007	ANTERIOR SHELL	
23	4201.432	TANK	
24	4201.013	RIGHT SHELL	
25	4100.054	TANK CAP	
26	4290.239	TANK FILTER	
27	4260.006	FUEL GAUGE	
28	4201.058	FUEL FILTER	
29	4201.443	RUBBER GASKET	
30	4201.415	OIL PIPE	
31	4201.009	REAR SHELL	
32	4201.472	REAR COVER	
33A	4201.483	POWER CORD SCHUKO	
33B	4201.423	POWER CORD NEW ZEALAND	
34	4260.268	6000 mAh BATTERY	
35	4106.312	3000 mAh BATTERY	
36	4260.270	BATTERY CHARGER	
37	4201.406	WIRES CLAMP	
38	4201.435	REAR COMPONENTS PLATE	
39	4201.480	DISPLAY BRACKET	
40	4201.078	DISPLAY COVER	
41	4201.426	ROOM THERMOSTAT SOCKET SPACER	
42	4160.647	ROOM THERMOSTAT SOCKET	
43	4161.400	ROOM THERMOSTAT PLUG	
44	4162.467	ROOM THERMOSTAT CAP	
45	4201.422	DISPLAY LABEL	
46	4290.028	DISPLAY BOARD SPACER	
47	4106.179	SWITCH	
48	4104.336	SWITCH COVER	
49	4201.424	DISPLAY BOARD	
50	4201.387	TURBULATOR	

UNIT 3***PARTS LIST****Rev. - - Sept. 2017*

POS.	Code NR	Description
51	4260.001	NOZZLE
52	4290.053	STRAIGHT CONNECTION
53	4201.456	OIL PIPE
54	4160.602	SCREW
55	4110.393	ELASTIC WASHER
56	4117.686	ELECTRODE BRACKET
57	4110.394	FIBER WASHER
58	4201.035	ELECTRODES
59	4201.033	COMBUSTION HEAD
60	4117.688	COMBUSTION HEAD PLATE
61	4201.460	PC-BOARDS BRACKET
62	4290.242	WIRES PROTECTION
63	4260.110	ANTI-TILT SENSOR
64	4290.003	WIRES PROTECTION
65	4201.089	HIGH TENSION WIRES
66	4260.263	HIGH TENSION TRANSFORMER
67	4201.476	COMPONENTS BRACKET
68	4201.481	COMBUSTION FAN+MOTOR
69	4260.243	OIL PUMP
70	4201.062	BREATHE RUBBER PIPE
71	4100.810	CLAMP
72	4201.062	OIL RUBBER PIPE
73	4100.810	CLAMP
74	4201.061	OIL RUBBER PIPE
75	4260.246	BREATHE VALVE
76	4201.260	PHOTOCELL SENSOR
77	4201.259	PHOTOCELL BRACKET
78	4290.242	WIRES PROTECTION
79	4260.233	RESET BUTTON
80	4290.021	PC-BOARD SPACER
81	4201.379	PC-BOARD
82	4290.243	POWER SUPPLY BOARD

MASTER
www.master.sklep.pl

www.master.sklep.pl
kontakt: www.master.sklep.pl/kontakt